



### OCS Assembly Instructions

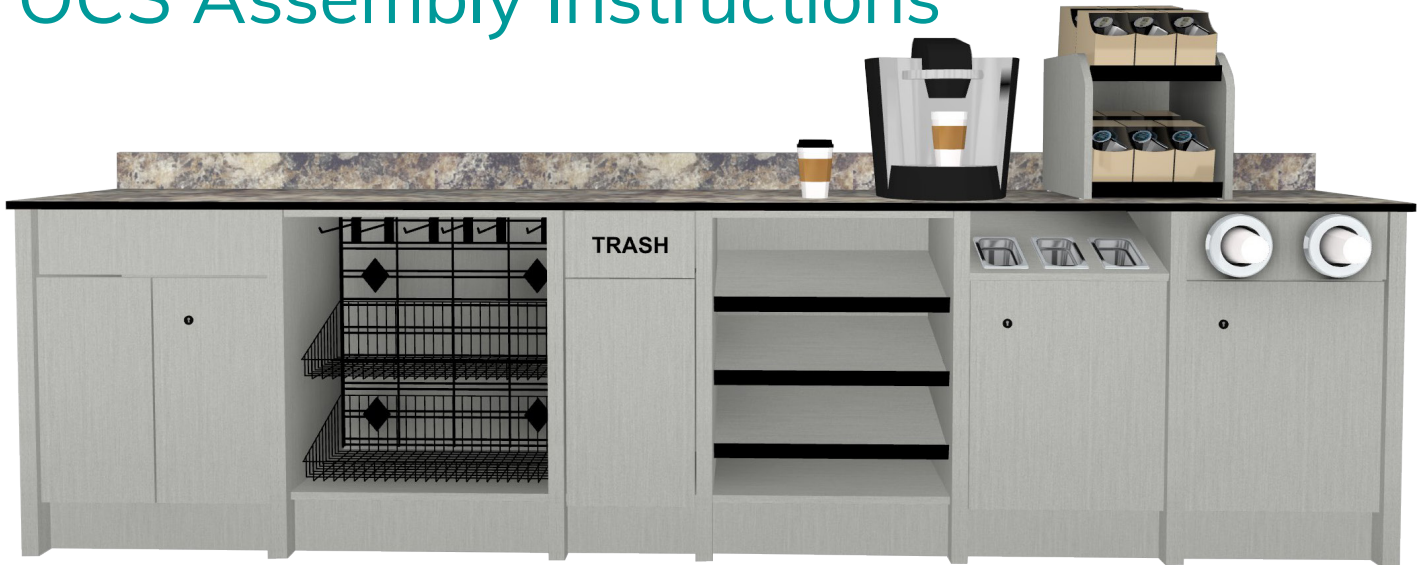

These instructions cover a wide range of layouts. This install may not contain all the elements shown. Use the layout provided for the install. All screws should be tightened until snug, do not over tighten!

#### Place Cabinetry and Bolt Together

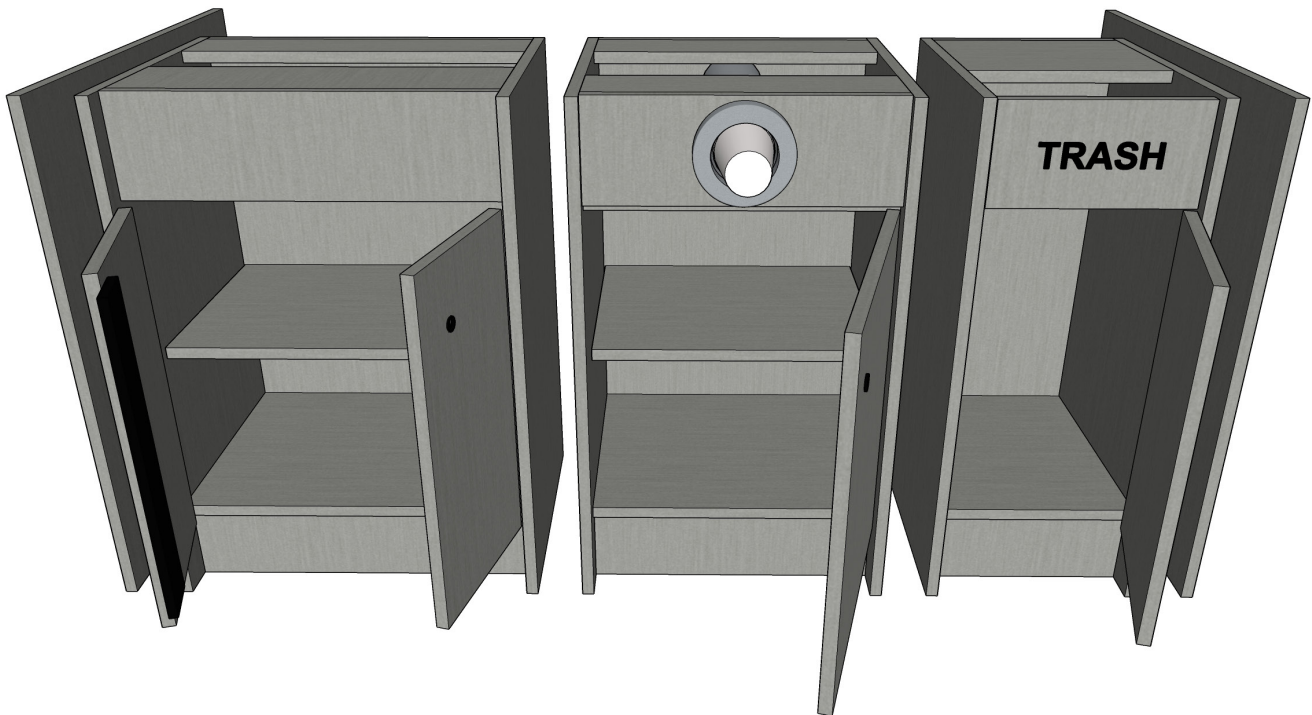

Align all cabinetry in place according to the layout ordered. Bolt end panels and cabinet modules together using the male and female bolts, with the Allen wrench provided in the hardware.

---

## Add Countertop Support

---

Screw the plywood countertop support piece into the two end panels using the screws provided in the hardware.



---

## Secure Countertop and Backsplash

---

Place the countertop onto the cabinetry and screw up from inside the cabinet modules into the counter to secure. Screw the backsplash into the countertop. All screws are provided in the hardware.



---

## Slide into Place

---

Gently slide the cabinetry into place. **These sections will be large and heavy so use caution and assistance to push the combined sections against the wall. Be sure to keep the panels from buckling while moving.**

**As a last step of any installation, please ensure everything is braced securely. We strive to include all necessary instructions and hardware but it is the responsibility of the installer to ensure the cabinetry has been secured properly.**

**Genesis Décor**  
*Creating Breakroom Environments*

### Contact Us:

Wil Arrington, Director of Sales  
804-313-5045  
wilarrington@genesisdecor.com

### Learn More:

Visit [GenesisDecor.com](http://GenesisDecor.com) to find out more about our various cabinetry lines, graphics, and color options.